709 3/4"-2"








Modification Overview

Production began in 1979 and was discontinued in 1993.

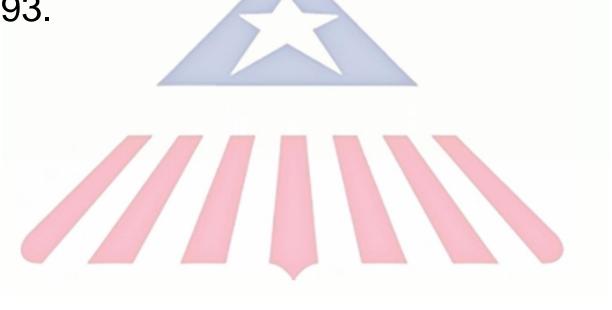

Check Cover Removal

Cover is o-ring sealed.

Check valve assembly is attached to the cover and spring is contained.

Pull cover and assembly straight out of the body. (Do not twist)







Check Valve Removal

The check valve is attached to the cover with a bayonet locking system.

Check valve assembly is spring loaded.

Holding the assembly in both hands, rotate the seat (cage) 1/4 turn.



Check Seat Removal

Once the cover and check valve are removed the seat (cage) is free.

Seat is sealed by an o-ring.



Check Disc Replacement

Check disc and disc holder can be replaced as one piece.





Check Valve Reassembly Notes

Reassemble check valve in reverse order.

Apply lubricant to seat o-ring and lid o-ring.

